



**AIR MOTORS
CATALOGUE**




modtec
moteurs & solutions pneumatiques

TAPPING MACHINE TRS 08

POWER 460 W



TRS 08

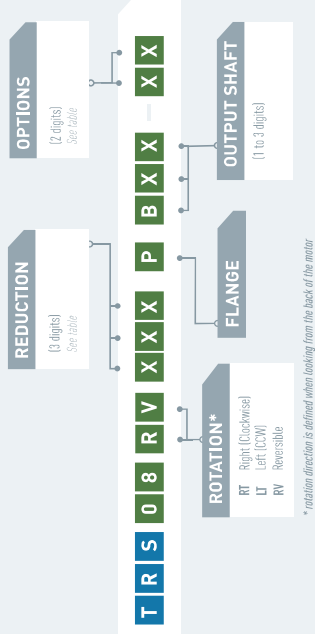

PERFORMANCES


TRS 08 reference	Reduction ratio	Air supply pressure	Speed (rpm)	Free @ max power	Max Power (W)	Air cons (Nl/min)	Dimensions
TRS 08 RV 005	5	6,2 bars	1427	3239	2,7	3,2	950
		4 bars	1475	2950	2,3	2,9	356
		2 bars	1347	2694	1,9	2,6	176
TRS 08 RV 006	6	6,2 bars	1339	2704	3,2	4,7	950
		4 bars	1426	2519	2,7	3,9	600
		2 bars	1124	2269	2,2	3,1	300
TRS 08 RV 007	7	6,2 bars	1066	2121	4,1	6,0	950
		5 bars	966	1932	3,5	4,4	356
		4 bars	882	1784	2,9	4,0	264
		2 bars	674	1369	2,0	3,1	150
TRS 08 RV	11	6,2 bars	674	1369	5,0	7,1	750
		5 bars	616	1231	4,1	5,7	600
		4 bars	579	1151	3,7	5,3	457
TRS 08 RV 023	23	6,2 bars	339	675	13	19	950
		5 bars	307	615	9,0	16	750
		4 bars	287	575	8,1	14	600
		2 bars	217	443	6,1	11	300
TRS 08 RV 028	28	6,2 bars	283	563	15	23	950
		5 bars	257	513	13	19	750
		4 bars	234	468	11	15	600
		2 bars	181	357	8,1	12	300
TRS 08 RV 035	35	6,2 bars	207	403	17	24	950
		5 bars	184	368	14	19	750
		4 bars	185	369	24	35	600
		2 bars	163	326	20	25	300
TRS 08 RV 042	42	6,2 bars	145	289	30	44	950
		5 bars	132	244	26	36	750
		4 bars	120	241	21	29	600
		2 bars	97	188	16	22	300
TRS 08 RV 054	54	6,2 bars	117	238	39	47	950
		5 bars	107	214	24	33	750
		4 bars	102	202	43	63	600
TRS 08 RV 077	77	6,2 bars	92	184	37	52	950
		5 bars	84	163	31	43	750
		4 bars	71	143	32	41	600
TRS 08 RV 111	111	6,2 bars	64	128	35	47	950
		5 bars	58	117	43	56	750
		4 bars	53	107	44	57	600
TRS 08 RV 132	132	6,2 bars	39	107	74	100	950
		5 bars	37	100	62	83	750
		4 bars	35	98	72	80	600
TRS 08 RV 159	159	6,2 bars	49	98	89	130	950
		5 bars	45	89	76	107	750
		4 bars	42	81	74	100	600
TRS 08 RV 202	202	6,2 bars	39	71	113	164	950
		5 bars	35	70	97	122	750
		4 bars	32	64	79	110	600

(Data indicated in this table have an accuracy of ± 5%)

OPTIONS AVAILABLE FOR THE TRS 08


ATEX certification	<input type="checkbox"/>
Left/Right switch	<input type="checkbox"/>
Lubrication free	<input type="checkbox"/>
Kit start	<input type="checkbox"/>
Code	03 12 16 17 29 30

LAYOUT TRS 08

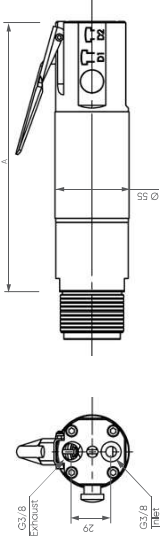

TAPPING CAPABILITY TRS 08

	M3	M4	M5	M6	M8	M10	M12	M14	M16	M18	M20
TRS 08 RV 005	Aluminum										
	Steel < 20kg										
TRS 08 RV 006	Aluminum										
	Steel < 20kg										
TRS 08 RV 007	Aluminum										
	Steel < 20kg										
TRS 08 RV 011	Aluminum										
	Steel < 20kg										
TRS 08 RV 023	Aluminum										
	Steel < 20kg										
TRS 08 RV 028	Aluminum										
	Steel < 20kg										
TRS 08 RV 035	Aluminum										
	Steel < 20kg										
TRS 08 RV 042	Aluminum										
	Steel < 20kg										
TRS 08 RV 054	Aluminum										
	Steel < 20kg										
TRS 08 RV 060	Aluminum										
	Steel < 20kg										
TRS 08 RV 077	Aluminum										
	Steel < 20kg										
TRS 08 RV 111	Aluminum										
	Steel < 20kg										
TRS 08 RV 132	Aluminum										
	Steel < 20kg										
TRS 08 RV 159	Aluminum										
	Steel < 20kg										
TRS 08 RV 202	Aluminum										
	Steel < 20kg										

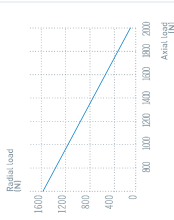

NOTES

POWER, SPEED, TORQUE AND AIR CONSUMPTION GRAPHS TRS 08 RV

